



1 Select Your Mount Type:

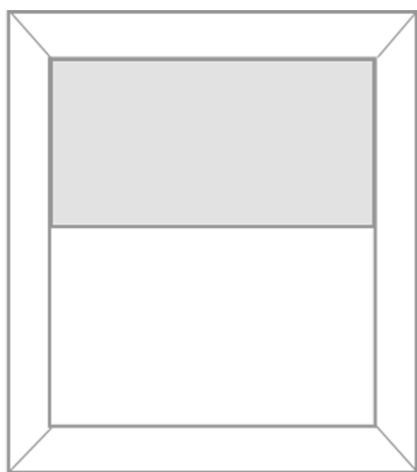

Inside Mount:


Inside Mount Roman Shades are mounted within the frame of the window and secured to top window sash. An Inside Mount Shade will require a minimum of 1-1/2" of depth within the window casing (See Step 3).

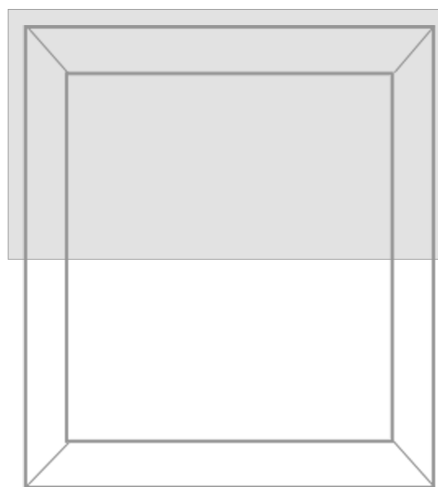

Outside Mount:

Outside Mount Roman Shades are mounted on the molding or wall surrounding the window. Outside Mount Shades are a good option when there is not enough available depth within the window casing to mount the shade.


② Measure Your Window:

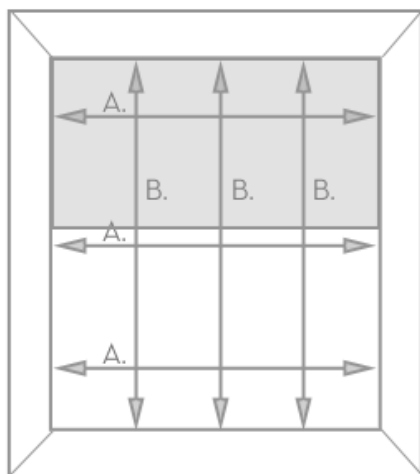

Inside Mount:

A. Measure the Inside Width at three locations the top, middle and bottom. Take the smallest of the three - this is your ordering width. DrapeStyle will take a deduction of $\frac{3}{8}$ " - $\frac{1}{2}$ " for mounting.

B. Measure the Height at three locations, left, middle and right. Take the largest of the three - this is your ordering length.

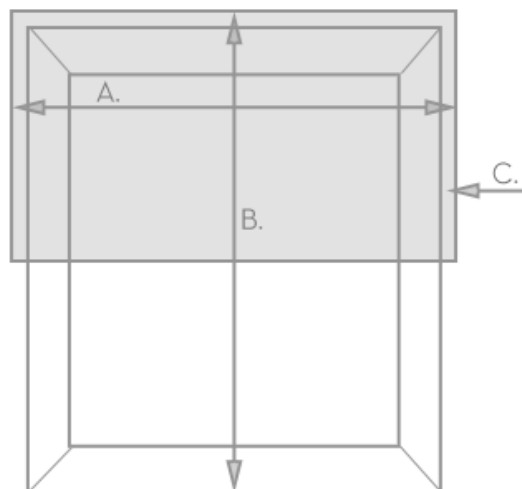


Outside Mount:

A. Measure the total width of your coverage area. We recommend adding 1" - 1-1/2" each side beyond the casing of your Window (C.) - This is your ordering width.

B. Measure the height of the coverage area. Add a minimum of 1" above top casing for mounting.


③ Casing Depth (Inside Mount Only):

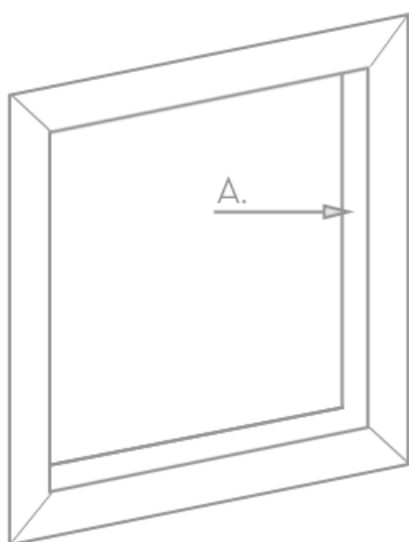

Inside Mount:


A. When ordering a Inside Mount please be sure you have at least 1-1/2" of depth within your window frame.

④ Select Cord Position:

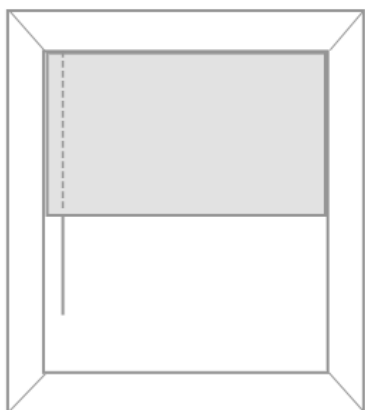

Left Cord Position:


Cord will be strung on left of shade.

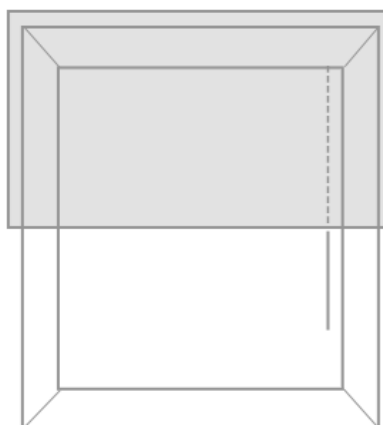

Right Cord Position:


Cord will be strung on right of shade.

⑤ Select Cord Type:

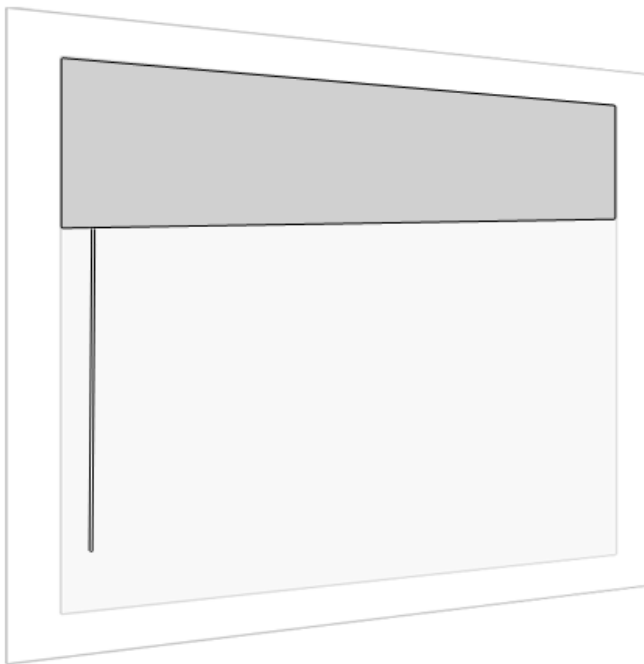

Cord Lock

- > Traditional Cord With Locking Mechanism
- > Cord “Locks” at Desired Position
- > Cord Cleat (Provided) Required to Wrap Excess Cord Around
- > Included in Base Price

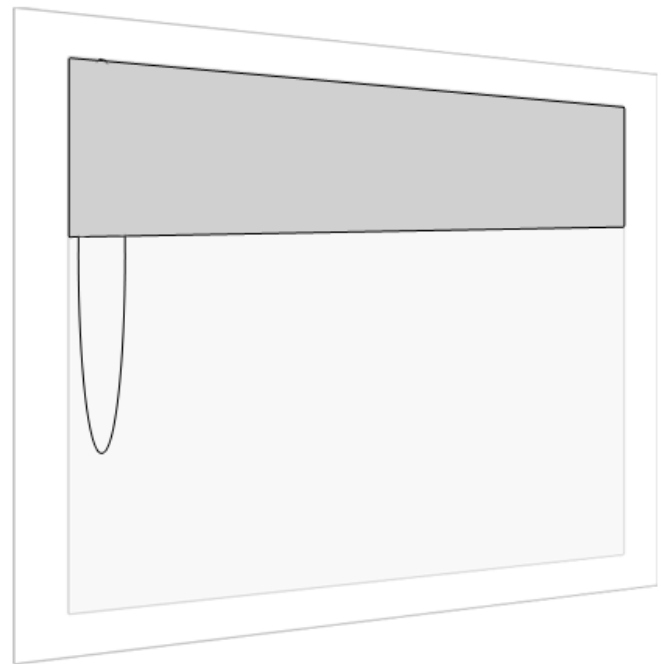

Continuous Cord

- > Continuous White Chain
- > Simple Operation
- > No Need for Cord Cleat
- > Requires an Upcharge